

DRAPER®

INSTRUCTIONS FOR 450kg Motorcycle Pad Lift

Stock No.04991 Part No.MCPL1

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY TO ENSURE THE SAFE AND EFFECTIVE USE OF THIS PRODUCT.



CE

DRAPER®

GENERAL INFORMATION

These instructions accompanying the product are the original instructions. This document is part of the product, keep it for the life of the product passing it on to any subsequent holder of the product. Read all these instructions before assembling, operating or maintaining this product.

This manual has been compiled by Draper Tools describing the purpose for which the product has been designed, and contains all the necessary information to ensure its correct and safe use. By following all the general safety instructions contained in this manual, it will ensure both product and operator safety, together with longer life of the product itself.

All photographs and drawings in this manual are supplied by Draper Tools to help illustrate the operation of the product. Whilst every effort has been made to ensure the accuracy of information contained in this manual, the Draper Tools policy of continuous improvement determines the right to make modifications without prior warning.



CONTENTS

Contents/Guarantee 1

Specification 2

General safety instructions 2

Getting to know your motorcycle pad lift 3

Operation and use..... 4

Maintenance 5

Decalartion enclosed



GUARANTEE

Draper tools have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship.

Should the tool develop a fault, please return the complete tool to your nearest distributor or contact Draper Tools Limited, Chandler's Ford, Eastleigh, Hampshire, SO53 1YF England.

Telephone Sales Desk: (023) 8049 4333 or Product Helpline (023) 8049 4344.

A proof of purchase must be provided with the tool.

If upon inspection it is found that a fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. The guarantee period covering parts/labour is 12 months from the date of purchase. This guarantee does not apply to normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accidents, or repairs attempted or made by any personnel other than the authorised Draper warranty repair agents.

Note: If the tool is found not to be within the Terms of Warranty, repair and carriage charges will be quoted and made accordingly.

This guarantee applies in lieu of any other guarantee expressed or implied and variations of its terms are not authorised.

Your Draper guarantee is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the guarantee period.

Please note that this guarantee is an additional benefit and does not affect your statutory rights.

Draper Tools Limited.

The Draper Tools policy of continuous improvement determines the right to change specification without notice.

Stock no.	04991
Part no.	MCPL1
Capacity	450kg
Lifting range	84 - 356mm
Table size	380 x 230mm

- **WARNING! Before use, ensure that the motorcycle to be supported has a suitable structure and centre of gravity to accommodate the platform without damaging the motorcycle. NOT use if the stand will foul on the exhaust or other vulnerable parts.**
- Locate the stand in a suitable work area. Keep area clean and tidy and free from unrelated materials and ensure that there is adequate lighting. Also ensure that the floor is level and strong enough (preferably concrete) to take the weight of the stand and the bike. **DO NOT** operate the stand on tarmacadam, as the surface may be unstable.
- Keep the stand clean for best and safest performance.
- The maximum bike weight is 450kg. **DO NOT** exceed this rated capacity.
- Before lifting check that there are no overhead obstructions.
- Keep children and unauthorised persons away from the work area.
- **DO NOT** use the stand for a task it is not designed to perform.
- **DO NOT** operate the stand if damaged.
- **DO NOT** exceed the rated capacity of the stand.
- **DO NOT** allow untrained persons to operate the stand.
- **DO NOT** make any modifications to the stand.
- Before lowering the stand ensure that there are no obstructions underneath the motorcycle and that all persons are standing clear.
- Before storing, ensure that all parts are clean and free of grease and oil and the stand is fully lowered. Store stand in a safe area.
- **WARNING! The instructions referred to in this manual are unable to cover all possible situations that may occur. It must be understood that common sense and caution are factors which are unable to build into this product, but must be applied by the operator.**



- ① Lift table.
- ② Base foot.

- **UNPACKING:** After removing the packing material, make sure the product is in perfect condition and that there are no visible damaged parts. If in doubt, do not use the product and contact the dealer from whom it was purchased.

The packaging materials (plastic bags, polystyrene, etc.), must be disposed of in an appropriate refuse collection container. These materials must not be left within the reach of children as they are potential sources of danger.

- **WARNING! Before use, ensure you read, understand and apply the safety instructions before use.**
 - **WARNING! Before use, ensure that the motorcycle has a suitable structure and centre of gravity to accommodate the stand without damaging the bike.**
DO NOT use the stand if it will foul on the exhaust, fairing or other vulnerable parts. If necessary remove any lower fairing and ensure that the bike is stable on the stand before operating.
 - Position the bike in a suitable area, checking that the surface on which the stand will be placed is solid and flat (preferably concrete).
 - Ensure there is good access and clearance beneath the bike for the stand.
 - The stand can be also be used in conjunction with a motorcycle that is already raised on a motorcycle lift. Ensure that the stand is centrally located secure and stable on the lift platform.
 - Inspect the underside of the motorcycle for suitable support points, bearing in mind the centre of gravity of the motorcycle and which wheel is to be lifted from the ground.
 - Place the stand under the motorcycle in the approximate position required.
 - Turn the hexagonal shaft clockwise to raise the stand until the platform is in contact with the underside of the motorcycle. Adjust the position of the stand as necessary and proceed to raise the bike.
- For additional security it is advisable to retain the motorcycle on the stand with suitable straps, especially if the motorcycle is already raised from the ground on a motorcycle lift.
- When work is complete, check under the stand to ensure that there are no obstructions and that it is safe to lower the unit.
- When the stand is fully lowered, ensure that the bike is standing on its wheels and is supported in the upright position.

- When the stand is not in use, store it in the lowered position.
- Keep the stand clean and wipe off any oil or grease. Lubricate all moving parts with oil.
- Before each use check all parts. If any part of the stand is damaged or defective, remove the stand from service and take the necessary action to remedy the problem.
DO NOT use the stand if it is believed to have been subjected to abnormal load or shock. Inspect and take appropriate action.

- At the end of the machine's working life, or when it can no longer be repaired, ensure that it is disposed of according to national regulations.
- Contact your local authority for details of collection schemes in your area.

In all circumstances:

- Do not dispose of power tools with domestic waste.
- Do not incinerate.
- Do not abandon in the environment.

- **DRAPER TOOLS LIMITED,**
Hursley Road, Chandler's Ford,
Eastleigh, Hampshire. SO53 1YF. U.K.

- **Helpline:** (023) 8049 4344
- **Sales Desk:** (023) 8049 4333
- **Internet:** www.draper.co.uk
- **E-mail:** sales@drapertools.com
- **Sales Fax:** (023) 8049 4209
- **General Enquiries:** (023) 8026 6355

- **Service/Warranty Repair Agent**
For aftersales servicing or warranty repairs, please
contact the Draper Tools Helpline for details of an
agent in your local area.

YOUR DRAPER STOCKIST

PJKC010811

©Published by Draper Tools Limited.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical photocopying, recording or otherwise without prior permission in writing from Draper Tools Ltd.