

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.




**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

### 1. INTRODUCTION

These spring balancers are designed to support the weight of frequently used tools such as air tools. They help reduce operator fatigue and keep the benches and production lines free of clutter. Simple clip-on tool attachment fitted to multi-strand steel cable and with fine tension adjustment by way of a large plastic knob.

### 2. OPERATION

- ❑ **Warning! When no load is applied or a load is removed, continue to hold the cable and allow it to retract in a controlled fashion. Sudden release of the cable could cause injury.**
- 2.1. Hang the balancer from a suitable hook, using the hole provided.
- ❑ **Warning! Ensure the hook used is capable of supporting the combined load of the balancer and any tools that may be attached.**
- 2.2. Turn the dial anti-clockwise to increase the spring tension i.e. for use with heavier tools.
- ❑ **Warning! Do not over tighten as this may well damage spring and mechanism.**
- 2.3. To decrease the spring tension i.e. for use with lighter tools, activate the release lever and allow the dial to turn clockwise.
- 2.4. To alter the length of cable that remains outside the balancer housing when fully retracted; loosen the two screws holding the plastic stopper, reposition the stopper as desired, and re-tighten the screws.
- 2.5. Clip the end of the cable to the required tool.
- ❑ **Warning! Ensure the tool is clipped securely to the cable and does not exceed the maximum load capacity of the balancer.**

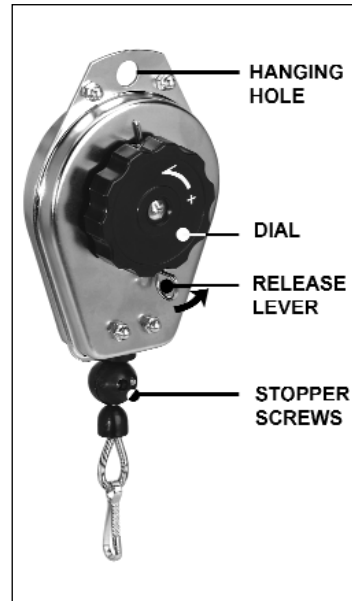

Model:	ATB0615	ATB1530
Max load (kg)	1.5	3
Min load (kg)	0.5	1.5
Cable length	1.5mtr	1.5mtr

**Important! Do not attempt to disassemble. Balancer contains a spring under tension which could cause serious injury. Any repairs must be carried out by an authorised service agent.**

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of this product. **WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim. **INFORMATION:** For a copy of our catalogue and latest promotions call us on 01284 757525 and leave your full name, address and postcode.

Thank you for purchasing a Sealey Product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.




**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

### 1. INTRODUCTION

These spring balancers are designed to support the weight of frequently used tools such as air tools. They help reduce operator fatigue and keep the benches and production lines free of clutter. Simple clip-on tool attachment fitted to multi-strand steel cable and with fine tension adjustment by way of a large plastic knob.

### 2. OPERATION

- ❑ **Warning! When no load is applied or a load is removed, continue to hold the cable and allow it to retract in a controlled fashion. Sudden release of the cable could cause injury.**
- 2.1. Hang the balancer from a suitable hook, using the hole provided.
- ❑ **Warning! Ensure the hook used is capable of supporting the combined load of the balancer and any tools that may be attached.**
- 2.2. Turn the dial anti-clockwise to increase the spring tension i.e. for use with heavier tools.
- ❑ **Warning! Do not over tighten as this may well damage spring and mechanism.**
- 2.3. To decrease the spring tension i.e. for use with lighter tools, activate the release lever and allow the dial to turn clockwise.
- 2.4. To alter the length of cable that remains outside the balancer housing when fully retracted; loosen the two screws holding the plastic stopper, reposition the stopper as desired, and re-tighten the screws.
- 2.5. Clip the end of the cable to the required tool.
- ❑ **Warning! Ensure the tool is clipped securely to the cable and does not exceed the maximum load capacity of the balancer.**

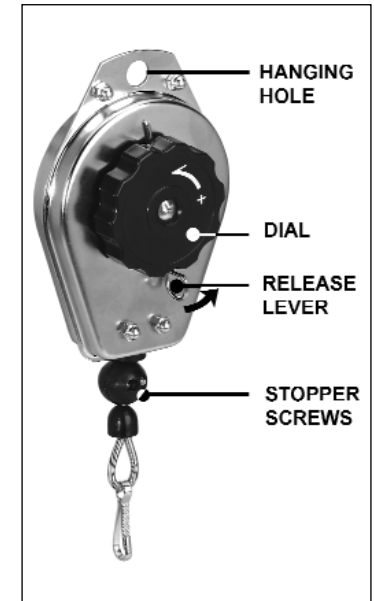

Model:	ATB0615	ATB1530
Max load (kg)	1.5	3
Min load (kg)	0.5	1.5
Cable length	1.5mtr	1.5mtr

**Important! Do not attempt to disassemble. Balancer contains a spring under tension which could cause serious injury. Any repairs must be carried out by an authorised service agent.**

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. **IMPORTANT:** No liability is accepted for incorrect use of this product. **WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim. **INFORMATION:** For a copy of our catalogue and latest promotions call us on 01284 757525 and leave your full name, address and postcode.