



INSTRUCTIONS for

Models: VMA 911 & VMA 912

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.



 
IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE OR PERSONAL INJURY, AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.


1. SAFETY INSTRUCTIONS

1.1. ELECTRICAL SAFETY

WARNING! It is the responsibility of the owner and the operator to read, understand and comply with the following: You must check all electrical products, before use, to ensure that they are safe. You must inspect power cables, plugs, sockets and any other connectors for wear or damage. You must ensure that the risk of electric shock is minimised by the installation of appropriate safety devices. A Residual Current Circuit Breaker (RCCB) should be incorporated in the main distribution board. We also recommend that a Residual Current Device (RCD) is used. It is particularly important to use an RCD with portable products that are plugged into a supply which is not protected by an RCCB. If in any doubt consult a qualified electrician. You may obtain a Residual Current Device by contacting your Sealey dealer. You must also read and understand the following instructions concerning electrical safety.

- 1.1.1. The **Electricity at Work Act 1989** requires that all portable electrical appliances, if used on business premises, are tested by a qualified electrician, using a Portable Appliance Tester (PAT), at least once a year.
- 1.1.2. The **Health & Safety at Work Act 1974** makes owners of electrical appliances responsible for the safe condition of those appliances and the safety of the appliance operators. **If in any doubt about electrical safety, contact a qualified electrician.**
- 1.1.3. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply. See 1.1.1. and 1.1.2. and use a Portable Appliance Tester.
- 1.1.4. Ensure that cables are always protected against short circuit and overload.
- 1.1.5. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that none is loose.
- 1.1.6. **Important:** Ensure that the voltage marked on the appliance matches the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating at right.
- 1.1.7. **DO NOT** pull or carry the appliance by the power cable.
- 1.1.8. **DO NOT** pull the plug from the socket by the cable.
- 1.1.9. **DO NOT** use worn or damaged cables, plugs or connectors. Immediately have any faulty item repaired or replaced by a qualified electrician. When a BS 1363/A UK 3 pin plug is damaged, cut the cable just above the plug and **dispose of the plug safely.** Fit a new plug according to the following instructions (UK only).
 - a) **Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.**
 - b) **Connect the BROWN live wire to the live terminal 'L'.**
 - c) **Connect the BLUE neutral wire to the neutral terminal 'N'.**
 - d) **After wiring, check that there are no bare wires, that all wires have been correctly connected, that the cable outer insulation extends beyond the cable restraint and that the restraint is tight.**

Double insulated products, which are always marked with this symbol , are fitted with live (brown) and neutral (blue) wires only. To rewire, connect the wires as indicated above - **DO NOT** connect either wire to the earth terminal.
- 1.1.10. Products which require more than 13 amps are supplied without a plug. In this case you must contact a qualified electrician to ensure that a suitably rated supply is available. We recommend that you discuss the installation of an industrial round pin plug and socket with your electrician.
- 1.1.11. If an extension reel is used it should be fully unwound before connection. A reel with an RCD fitted is preferred since any appliance plugged into it will be protected. The cable core section is important and should be at least 1.5mm², but to be absolutely sure that the capacity of the reel is suitable for this product and for others which may be used in the other output sockets, we recommend the use of 2.5mm² section cable.

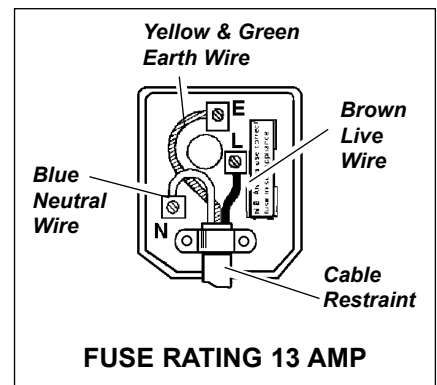


1.2 GENERAL SAFETY

- ✓ Disconnect the machine from mains power supply before servicing, changing accessories, or performing any maintenance.
- ✓ Use genuine accessories and parts only (*unauthorised accessories and parts may be dangerous, and will invalidate your warranty.*)
- ✓ Maintain the Valet machine in good condition. Use authorised agent for servicing. Keep machine clean, but **DO NOT use solvents.**
- ✓ Ensure the correct filter is firmly in place before operating the Auto Valet. *Wrong filters will invalidate your warranty.*
- ✓ Wear protective clothing and gloves.
- x DO NOT allow children or untrained persons to operate the unit.
- x DO NOT place attachments close to your face (especially eyes, ears, etc). Do not point the hose end at other persons or animals.
- **WARNING!** *DO NOT get detergent on flesh. If contact is made wash immediately. NEVER allow detergent near eyes, or mouth. If contact is made, thoroughly rinse and seek medical advice. If swallowed, seek immediate medical advice. Follow instructions on the detergent container.*
- ▲ **DANGER!** *DO NOT vacuum hot or glowing ash, cigarette ends, inflammable, explosive, corrosive or dangerous liquids, solids or dusts.*
- x DO NOT operate the unit without the correct filter for the type of job. Make sure the filter is firmly in place.
- x DO NOT operate the pump switch when there is no liquid in the detergent tank. The vacuum motor runs independently of the pump.
- x DO NOT leave machine running unattended. Turn power supply OFF, and DO NOT leave the vicinity until motor has come to a complete stop.
- x DO NOT operate the Auto Valet while under the influence of drugs, alcohol or impairing medication, or if you are fatigued.
- x DO NOT force the Auto Valet to achieve a task it is not designed to perform.
- x DO NOT clean the filters with solvents. When not in use store the valet machine in a safe, dry, childproof location.


2. PACKAGE CONTENTS & ASSEMBLY

fig 1.

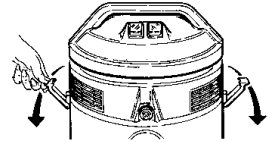

2.1. Carton Content

- 2.1.1. Carefully unpack the carton content and view the main body of the vacuum cleaner.
- 2.1.2. Locate the two side clips which hold the motor head in place (fig 1).
- 2.1.3. Undo the clips, remove the motor head and take out the contents of the tank.
- 2.1.4. Check and identify each component as listed below. If anything is missing or damaged please contact your supplier immediately.

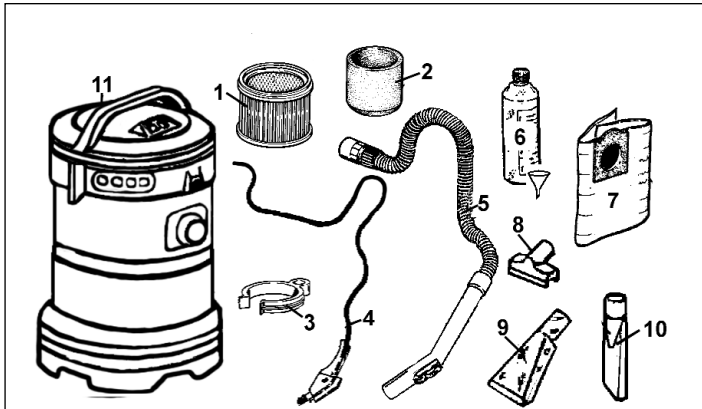


LIST OF CONTENTS.

Item	Part No	Description
1	VAC/92/DL	Cartridge filter
2	186/83035BHB	Foam filter
3	186/50318BHN	Clips (x6)
4	186/01333BHN	Detergent delivery pistol system
5	186/01300BON	Flexible hose
6	186/89051FHI	Bottle shampoo & funnel
7	186/83015BOI	Dust bag
8	186/60252BON	100mm Pick up nozzle
9	186/01330BHN	Small valeting tool
10	186/60250BON	Narrow pick up nozzle
11	VMA911 or 912	Main body

2.2. OPTIONAL CLEANING KIT.

For use as an industrial dry carpet cleaner, or wet carpet extraction cleaner in "Stand Up" mode, you will need to order kit VMA912/CL10, which fits all models covered by these instructions (fig 2).

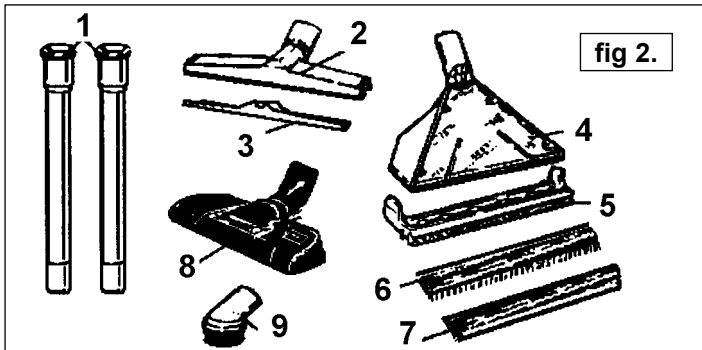

LIST OF CONTENTS.

Item	Part No	Description
1	186/40035BHM	Stainless steel tubes
2	186/50372BHN	Adaptor for large nozzle
3	186/60278BON	Brush for liquids
4	186/01331BHN	Rubber washing nozzle
5	186/60281BON	Frame for multi purpose brush
6	186/30094BSX	Bristle strip
7	186/70071BHN	Rubber strip
8	186/95001FON	Carpet brush with articulated head for dry carpet cleaning
9	186/60255BON	Round brush

3. DRY VACUUM CLEANING

WARNING! Ensure you read, understand and apply chapter 1 "Safety Instructions". Reminder: **DO NOT** vacuum hazardous dust or other substances. Use of an incorrect filter will invalidate your warranty. The green pump switch will operate independently of the vacuum motor. Only press this switch if using the machine as a WET vacuum cleaner (see chapter 4).

To use the machine as a "DRY" car fabric cleaner, (no liquids involved), proceed as follows:

- 3.1. Ensure the machine is unplugged from the mains power supply.
- 3.2. Remove the motor head, and remove the detergent tank. Fit the dry cartridge filter (figs 4, 5, 6), if not already assembled.
- 3.3. Attach the plastic connector to the inlet of the paper dust bag (fig A). Fit the paper dust bag onto the inside of the vacuum intake pipe (see fitting instructions on side of bag) fig B.
- 3.4. Reposition the head onto the drum body ensuring that the switches face forward, and clip in place.
- 3.5. Connect flexible hose to the front inlet on the tank.
- 3.6. Attach the appropriate end nozzle: Flat or Tapered Nozzles.
- 3.7. Plug in to power supply, and **PRESS THE BLACK MOTOR "ON" SWITCH ONLY. DO NOT TOUCH THE GREEN PUMP SWITCH** (fig 7). You are now ready to use the Auto Valet machine as an ordinary vacuum cleaner for vacuuming car interiors.
- 3.8. When you have completed vacuuming, switch the **BLACK MOTOR SWITCH "OFF"**, and unplug from mains.
- 3.9. Regularly check the dust bag and remove when it is 2/3 full. Seal bag opening with the cap attached and dispose of the bag. The bag is manufactured so that air, not dust, will filter through the paper and as such the dust bag **must not** be reused.
- 3.10. If you wish to use the machine for a wet application and the dust bag is less than 2/3 full, carefully remove the bag, store for future use, and wipe the tank clean.

fig 4

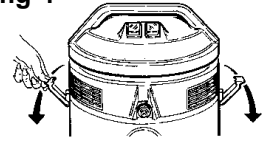


fig 5

 


fig 6

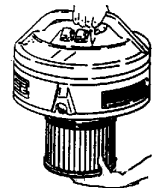


fig A

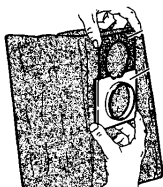


fig B


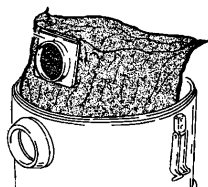


fig 7

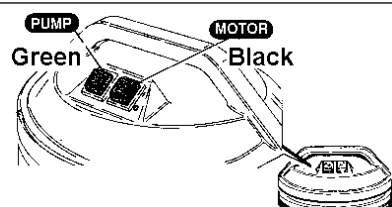

4. WET VACUUM CLEANING

For the vacuuming of liquids only

WARNING! Ensure you read, understand and apply chapter 1 "Safety Instructions". Reminder: Remove plug from mains power supply before opening unit. DO NOT vacuum solvents, explosives, inflammable or hazardous liquids, petrol, oil, spirit, paint, thinner and/or chemicals. The use of incorrect filter will invalidate your warranty.

IMPORTANT: The water pump in this unit incorporates a thermal cut-out. Should the unit overheat, this will be tripped and the pump will temporarily stop working. In this event, leave unit to cool for approx. 10 minutes (depending on conditions) for the cut-out to reset and then restart the pump.

4. 1. Ensure the machine is unplugged from the mains power supply.
4. 2. Make sure the tank is clean and free from dust and dirt.
4. 3. Remove cartridge filter and dust bag (if fitted, see 3.9 & 3.10).
4. 4. Fit the blue foam filter in place (fig 8).
4. 5. Replace the head onto the drum body.
4. 6. To the same flexible hose as used in dry cleaning fit the Flat, or Tapered Nozzle.
4. 7. Ensure the **BLACK** Motor Switch is in the "OFF" position before plugging in.
4. 8. Plug the cleaner into the mains power socket.
4. 9. Press the **BLACK MOTOR SWITCH "ON" ONLY. DO NOT SWITCH THE PUMP ON.**
4. 10. To vacuum large quantities of liquid, i.e from a sink, or tank, etc; do not immerse the nozzle completely in the liquid, leave a gap at one end of the nozzle to allow a partial air inflow. (fig 9).
4. 11. The machine is fitted with a **FLOAT VALVE** which stops the suction action when the tank has reached its maximum capacity. The user will also be aware of increased motor speed. When this happens, turn the machine off, disconnect from mains, remove the head from tank, and empty liquid out of the tank into an appropriate receptacle or drain (figs 10, 11). To continue vacuuming reverse the process, and proceed.
- 4.12. After WET vacuuming turn the machine off and remove the plug from mains power supply.
- 4.13. Empty the tank, then clean and dry the inside before storage.

fig 8

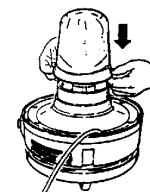


fig 9



fig 10

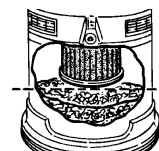


fig 11



5. USE AS VALETING MACHINE

FOLLOWING INSTRUCTIONS REFER TO USE AS AN AUTOMOTIVE/INDUSTRIAL, FABRIC & UPHOLSTERY CLEANER.

WARNING! USE THE CORRECT DETERGENT: THE ONLY DETERGENT SUITABLE FOR THIS MACHINE IS SEALEY "VMR" or THE DETERGENT SUPPLIED WITH THE MACHINE. CONTACT YOUR SEALEY DEALER FOR SUPPLIES. DO NOT (UNDER ANY CIRCUMSTANCES) USE DOMESTIC DETERGENT OR ANY OTHER GENERAL PURPOSE CARPET CLEANER, CAR WASH, CLEANING OR UPHOLSTERY DETERGENT. OTHER DETERGENTS PRODUCE EXCESSIVE FOAM WHICH IS UNDESIRABLE FOR THE CLEANING PROCESS AND CAN DAMAGE THE WORKING PARTS OF YOUR MACHINE. IF, WHEN USING THE RECOMMENDED DETERGENT, YOU FIND EXCESSIVE FOAM BEING PRODUCED, THE CARPET OR FABRIC HAS BEEN PREVIOUSLY CLEANED WITH A FOAMING DETERGENT. SHOULD THIS HAPPEN, ADD 10cl OF ANTI-FOAMING AGENT (SEALEY PART NO VMR922) TO THE MAIN WASTE WATER TANK.

WARNING! ENSURE YOU READ, UNDERSTAND AND APPLY CHAPTER 1 "SAFETY INSTRUCTIONS". THE USE OF AN INCORRECT FILTER OR DETERGENT, WILL INVALIDATE THE WARRANTY. ALWAYS TEST MATERIALS FOR COLOUR FASTNESS BEFORE USING THE AUTO VALET.

5.1. FABRIC PREPARATION & DETERGENT

- 5.1.1. If the condition of the vehicle fabric, or item of upholstery, requires dry vacuuming first, you may prefer to use an alternative vacuum cleaner, keeping your Auto Valet on standby ready for the wet clean.
- 5.1.2. Should you wish to use the Auto Valet for the preliminary dry clean, then set the machine up as in chapter 3.
- 5.1.3. To commence with the wet clean ensure you use the correct detergent as described in this chapter heading.
- 5.1.4. Remember to add 'Anti-foaming agent VMR922' to the waste tank if necessary.
- 5.1.5. Fill the plastic detergent tank with COLD water up to the "MAX" level, or according to the amount you wish to use (fig 12).
- 5.1.6. Add 20cl of SEALEY "VMR" or Supplied detergent.
- 5.1.7. **DO NOT USE ANY OTHER DETERGENT.**
- 5.1.8. **DO NOT** increase the strength of detergent mix beyond 1 part detergent to 80 parts water.
- 5.1.9. If part of the fabric is badly soiled, rub in by gloved hand a mix of 1-80 detergent and leave for 2-3 minutes before valeting.

fig 12



5.2. SETTING UP THE AUTO VALET

How to prepare/assemble your valet machine ready for wet (detergent) cleaning.

- 5.2.1. Ensure you unplug the machine from the mains supply.
- 5.2.2. Having filled the detergent tank, place it in the trolley basket.
- 5.2.3. Remove the vacuum motor head and fit the blue foam filter (fig 13). *Remove the cartridge filter and paper dust bag if fitted as they are for dry cleaning only.*
- 5.2.4. Attached to the motor head is a small tube with a filter at the end. When refitting the head assembly onto the tank, place this pick-up tube into the hole of the detergent tank (fig 15).
- 5.2.5. Replace the motor head and secure with the side clips.
- 5.2.6. Loosen the thumb screw on the pistol head (fig 16 A), and clip the pistol over the end of the vacuum hose (fig 16). Finger tighten the thumb screw and check that the pistol is properly attached to the hose. Connect the detergent delivery tube to the main vacuum hose with clips provided (fig 17).
- 5.2.7. Push the end of the delivery tube into the outlet located in the front of the motor head above the main hose outlet (fig 18). *When disconnecting this tube, push the inlet ring back to release the delivery tube. DO NOT PULL THE TUBE.*
- 5.2.8. The flexible vacuum hose should be fitted to the machine as normal (fig 19).
- 5.2.9. Attach the valeting tool head to the hose and detergent dispenser tube.

fig 13

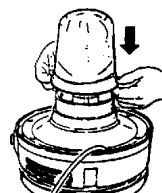


fig 14

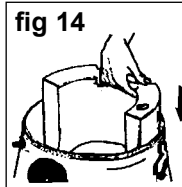


fig 15

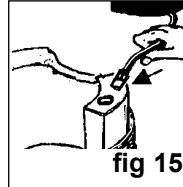


fig 16

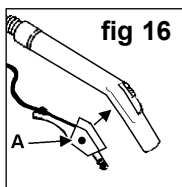


fig 17

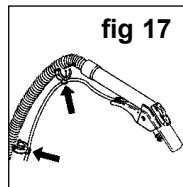


fig 18


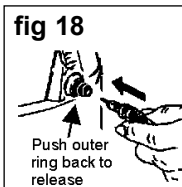


fig 19

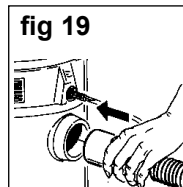

5.3. OPERATING THE AUTO VALET MACHINE

❑ **WARNING! Test materials for colour fastness, test on an area not normally noticed (i.e. under a car seat).**

- 5.3.1. Plug the machine into the mains power supply.
- 5.3.2. Switch the **BLACK MOTOR SWITCH "ON"** to start the vacuum (fig 20).
DO NOT PRESS THE PISTOL TRIGGER AT THIS STAGE.
- 5.3.3. Place the cleaning head on the material to be cleaned and press the **GREEN PUMP SWITCH "ON"** (fig 20).
- 5.3.4. Press the trigger (fig 21) and move the tool slowly across the material by drawing the head towards you. Work in small areas at a time. The pump produces pressure which forces detergent into the fabric pile. During this first pass approximately 60% of the dirty fluid will be sucked back up into the waste tank.
- 5.3.5. Make a second pass **WITHOUT** pressing the trigger (fig 22). This will extract the remainder of the fluid from the material, leaving the fabric almost dry.
- 5.3.6. Allow the fabric, or upholstery to dry completely before walking, or sitting on it.

fig 20

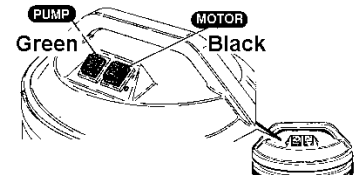


fig. 21


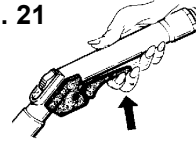


fig. 22

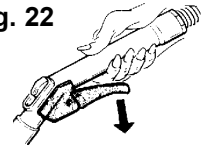

6. AFTER USE

- 6.1. Remove the plug from the mains.
- 6.2. Remove the motor head.
- 6.3. Empty tank of dirty liquid into a suitable waste receptacle or drain.
- 6.4. Empty and rinse out the detergent tank.
- 6.5. Fill the detergent tank with clean water, and flush the system by operating into a bucket, or drain. Continue to flush until all the dirty fluid has been expelled.
- 6.6. Rinse the tank clean.
- 6.7. Wipe the tank and fittings and leave to dry.
- 6.8. Check the filter at the end of the detergent pick-up pipe to ensure it is not clogged. If it is, remove and rinse under running water (fig 23).
- 6.9. Remove the main motor head filter and clean as in chapter 7.

NOTE: Before next use, check that the correct filter is fitted for the job you are going to perform. Use of wrong filter will invalidate your warranty.

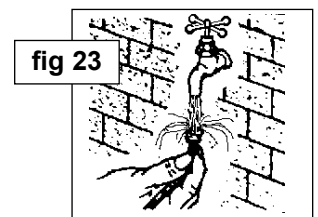


fig 23

7. MAINTENANCE

❑ **WARNING ENSURE YOU DISCONNECT FROM THE MAINS POWER SUPPLY BEFORE OPENING THE UNIT, OR CARRYING OUT ANY MAINTENANCE.**

7.1. General Machine Maintenance.

- 7.1.1. Remove plug from the mains power supply before carrying out service or maintenance.
- 7.1.2. Regularly check and clean the filter connected to the end of the detergent pick-up pipe by running under a cold water tap (fig 23).
- 7.1.3. After having used the appliance as a wet cleaner, empty the contents. Clean and dry the tank and accessories to avoid scaling.
- 7.1.4. Periodically check to ensure the valet machine and accessories are not blocked or damaged, and are in good working order. Any damaged parts must be replaced immediately. Blocked hoses or tubes will impair performance and may damage the machine. Such damaged motor units returned for repair will not be accepted under the warranty and may incur expensive repair bills.

7.2. Cleaning Filters.

For optimum performance, all types of filters should be cleaned regularly. Unclean, damaged, or wrongly fitted filters will impair your machine's performance and may damage it. Such damaged motor units returned for repair will not be accepted under the warranty, and may incur expensive repair bills. Never use the machine without a filter. Dirt in motor will cause failure and will invalidate the warranty.

7.2.1. CLEANING FOAM FILTER. Used for wet cleaning.

- a) Wash the foam filter in a suitable container of lightly soapy water (DO NOT use solvents).
- b) Allow to dry before use. Check to see if the filter is worn, in which case it must be replaced with a new one.

7.2.2. CARTRIDGE FILTER CLEANING. Used for dry cleaning.

- a) Remove the filter cartridge from the motor head (fig 24).
- b) Regularly clean the cartridge filter by dusting with a soft bristle brush (fig 25).
- c) **DO NOT get the filter wet or wash filter in water or any other cleaning liquids as the filter will disintegrate (fig 26).**

NOTE: Inspect filters regularly, if large amounts of un-removable deposits are obvious, or if the filter is worn or damaged it must be replaced. We recommend that you keep a spare of each filter.

fig 24

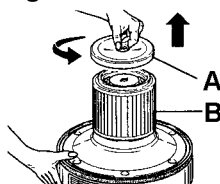


fig 25


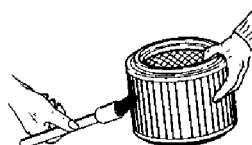


fig 26

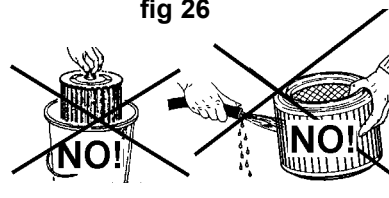


7.2.3. AIR OUTLET FILTER.

Behind the side grilles in the motor head are two special filters (fig 27) which ensure the air returned to the environment is as free as possible from impurities. The filters will require periodic changing. Use a coin, screwdriver or similar tool, to gently lever off the grilles, remove filters and replace with new ones. When refitting grilles ensure the arrow on the inner part of the grilles points upwards.

fig 27

Remove grilles and replace filters

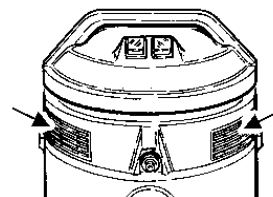

8. TROUBLESHOOTING

Unit does not start.	No current. The power cable, switch, or motor faulty. Tank may be full of water.	Check the plug and fuse. Repair or replace faulty part. Empty tank if full.
	Water pump thermal cut-out has triggered	Wait approx. 10 minutes for cut-out to reset
Dust comes from the motor unit.	Damaged filter, or filter incorrectly fitted.	Reposition or replace the filter. <i>Take care, as warranty may be lost.</i>
Low efficiency.	Container is full. Filter obstructed. Hose or accessory blocked.	Empty container. Clean or replace the filter (Chapter 7). Unblock hose or accessory.
Filter problems.	Outlet filter obstructed. Hose or tool blocked.	Check, clean, or replace the filter (chapter 7). Remove any obstruction from hose.
Motor speed increases or motor vibrates.	Container is full. Filter obstructed. Hose or accessory blocked.	Empty the container, clean, refit, or replace filter (Chapter 7). Unblock hose or accessory.
Foam comes out of the air filter.	Wrong detergent used, or used on carpet or fabric previously cleaned with foaming detergent.	Add Sealey VMR922 Anti-foaming agent to waste water tank (see 5.1).
Detergent solution spray not uniform.	Detergent filter clogged. Pick up pipe clogged.	Remove filter and clean (Chapter 7) . Remove pick up pipe/clean filter (Chapter 7).

CONSUMABLES

Part No VMR921 Detergent for Valet Machine Packs of 12 x 1 Ltr Bottles.

Part No VMR925 Detergent for Valet Machine Packs of 4 x 5 Ltr Containers.

Part No VMR922 Defoaming Agent Packs of 12 x 1 Ltr Bottles.

Declaration of Conformity

We, the sole importers into the UK, declare that the products listed below are in conformity with the following standards and directives.

Auto Valet Model: VMA911 & VMA912
 73.23/EEC Low Voltage Directive
 89/336/EEC EMC Directive
 93/68/EEC CE Marking Directive



The construction files for these products are held by the Manufacturer and may be inspected on request by contacting Jack Sealey Ltd.

Signed by Mark Sweetman

5th October 2006

For Jack Sealey Ltd. Sole importer into the UK of Sealey Power Products.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our catalogue and latest promotions call us on 01284 757525 and leave your full name, address and postcode.

	Sole UK Distributor	01284 757500		www.sealey.co.uk
	Sealey Group, Bury St. Edmunds, Suffolk.	01284 703534		sales@sealey.co.uk