



INSTRUCTIONS FOR: VACUUM OIL/FLUID EXTRACTOR 5.5 ltr Model: TP696

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

! IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY INSTRUCTIONS

- ✓ Keep the extractor clean and maintain it in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Keep all non-essential persons away from the work area.
- ✓ Check extractor connections and fittings before use.
- ✓ Ensure that the tank capacity exceeds the amount of fluid to be collected.
- ✗ **DO NOT** use the extractor for any purpose other than that for which it is designed.
- ✗ **DO NOT** operate the extractor if any parts are damaged or missing as this may cause failure and/or personal injury.
- ✗ **DO NOT** leave the extractor operating unattended.
- ☐ **WARNING!** Engine oil will be hot when extracting.
- ✓ **IMPORTANT!** Ensure that you wear protective clothing, gloves, goggles, face mask as appropriate for the fluid being extracted.
- ☐ **WARNING!** DO NOT allow uncontrolled discharge of fluids thus polluting the environment.
- ✓ Dispose of waste fluids in accordance with local authority regulations.
- ☐ **WARNING!** DO NOT use with gasoline or other flammable liquids.
- ✗ **DO NOT** use the unit to extract dangerous chemicals, poisons, acids, alkalines or solvents.
- ✗ The container is not designed for long term storage.
- ✗ **DO NOT** store the unit under extreme conditions.
- ✗ **DO NOT** turn the container upsidedown when it is holding fluids.
- ✗ **DO NOT** adapt the unit for any other purpose.
- ✓ When not in use, disconnect from the air supply and store in a safe, dry, childproof area.



2. SPECIFICATION

5.5ltr Capacity device constructed from composite materials and suitable for the extraction of engine oils from cars, motorcycles, marine engines, stationary engines and industrial machinery. Suitable also for low viscosity fluids such as water. Supplied with 2100mm suction probe, easy-pour spout and cover cap. Use suction probe to remove engine oil through the dipstick tube.


Capacity 5.5 litre
Overall length of suction probe 2100mm

3. OPERATING INSTRUCTIONS

ENSURE YOU READ, UNDERSTAND AND APPLY THE SECTION 1 SAFETY INSTRUCTIONS.

NOTE: The black section of the probe is permanently joined to the clear section and cannot be separated

- 3.1. Before Using.**
- 3.1.1. Pre-run engine for 10 minutes, to warm the oil and to allow any sludge or contaminants within the oil to mix and to suspend.
 - 3.1.2. Screw handle (F) onto pump (B).
- 3.2. Operation.**
- 3.2.1. Replace red cap on container with tube cap (D) and fix firmly.
 - 3.2.2. Before attaching pump (B), make sure the black rubber collar (E) on container (A) is firmly seated.
 - 3.2.3. Remove dipstick from vehicle.
 - 3.2.4. Insert black part of suction probe into vehicle dipstick pipe until it reaches the bottom of the oil pan.
 - 3.2.5. With two hands pump handle (F) 10 to 20 times. Oil will flow out automatically.
DO NOT PUMP CONTINUOUSLY- DO NOT FORCE THE PUMP HANDLE.
 - 3.2.6. After extracting, remove tube cap (D) from container with a twisting action.
 - 3.2.7. Remove pump (B) and attach pour spout (C) and empty oil (fluid) into a suitable receptacle for safe disposal. Do not hold the container upside-down.

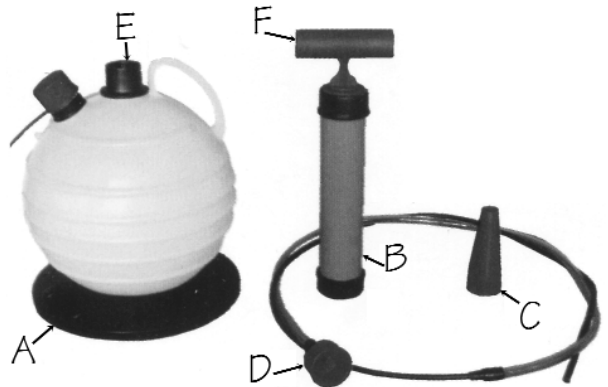

4. MAINTENANCE

Keep the unit clean, wipe off any fluid spillage. Keep the suction tubes clean and clear of blockages. Check that all tubes, hoses and connections are in good condition.

Parts support is available for this product. To obtain a parts listing and/or diagram, please log on to www.sealey.co.uk, email sales@sealey.co.uk or phone 01284 757500.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this equipment.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions, call us on 01284 757525 and leave your full name and address including your postcode.



Sole UK Distributor
Sealey Group,
Bury St. Edmunds, Suffolk.

☎ 01284 757500
☎ 01284 703534



www.sealey.co.uk
sales@sealey.co.uk